

Replace to]



Replace to <GS>

Scan mode

This product has auto sense mode. Scan the barcode below to configure.

Disable auto sense mode

When auto sense mode is disabled, you should trigger scanner by pressing button. This mode is factory default.



Disable auto sense (default)

Enable auto sense mode

When the auto sense mode is enabled, the scanner can automatically detect the barcode in front of the lens and scan barcode.

