



**STEP 5**  
Assembly the mounting bracket by 2pcs M4\*8 self- tapping screws.

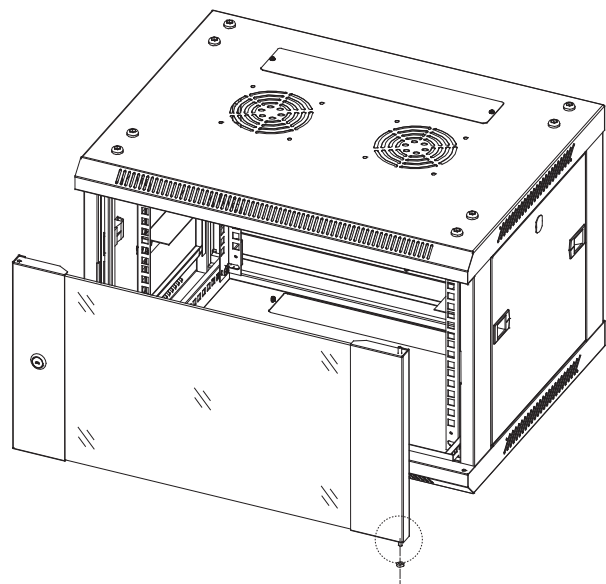

White plastic washer

**STEP 6**  
Assembly the front door with 1pcs white plastic washer and bolt. And toolless assembly the side doors.

**Note:**After assembly,please adjust the diagonal size of the cabinet to ensure homogeneous space for all doors and all doors work well.

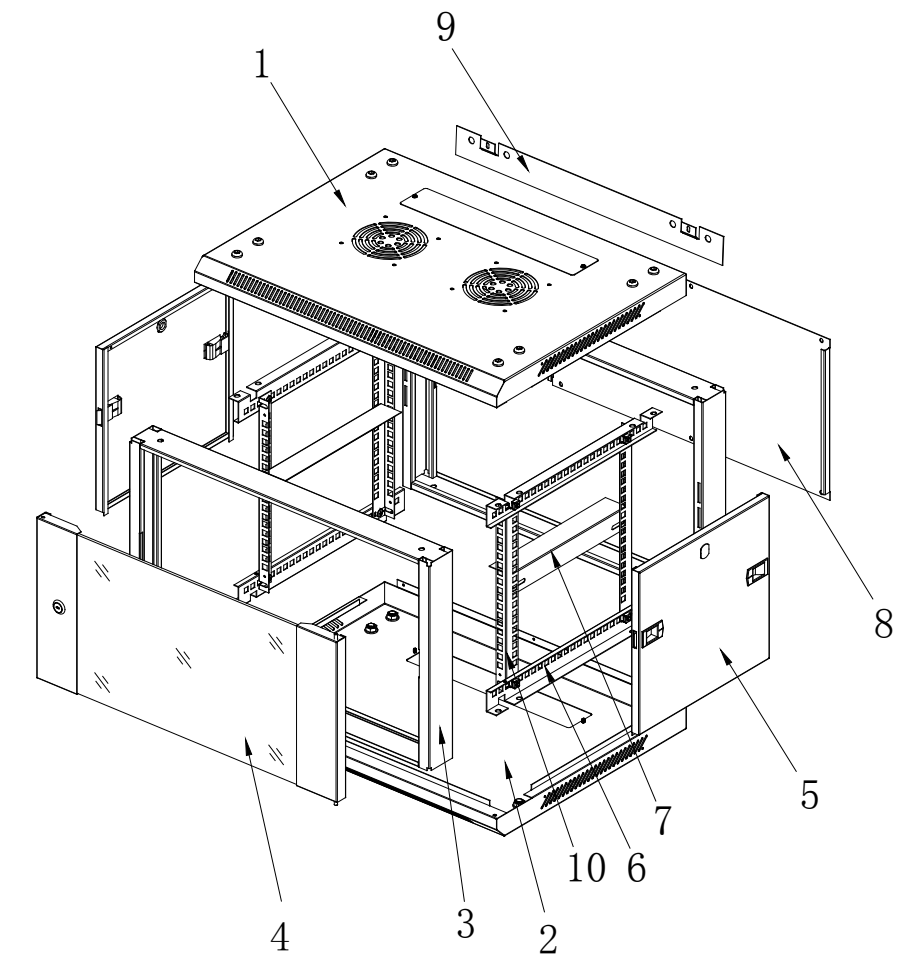

## Packaging List

- |                        |                                   |
|------------------------|-----------------------------------|
| 1. Top panel - 1pcs    | 6. Horizontal beam - 4pcs         |
| 2. Bottom panel - 1pcs | 7. L type mounting bracket - 2pcs |
| 3. Frame - 2pcs        | 8. Rear panel - 1pcs              |
| 4. Front door - 1pcs   | 9. Mounting bracket - 1pcs        |
| 5. Side panel - 2pcs   | 10. Vertical mounting rail - 4pcs |

## Item List of Accessories Packaging

Assembly Hardwares Kits:









- |                                     |                                   |
|-------------------------------------|-----------------------------------|
| • M8*12 inner hexagon screw - 16pcs | • M4*8 self-tapping screw - 12pcs |
| • M8 flange nut - 16pcs             | • White plastic washer - 1pcs     |
| • M6*12 screw - 12pcs               | • Keys - 2pcs                     |
| • M6 cage nut - 12pcs               | • L type wrench - 1pcs            |

End User Hardwares Kits:


U Capacity ≤12U, 12 sets cagenuts ; U Capacity >12U, 24 sets cagenuts.  
(cagenut : M6\*12 screw & M6 cage nut)

*Tips: Check the quantities of the items before assembly.*


### Installation of Accessories

NO.	QTY	SCREWS AND NUTS	
1	16		M8*12 inner hexagon screw
2	16		M8 flange nut
3	12		M6 Screw
4	12		M6 cage nut
5	6		M4 Self-tapping Screw
6	1		White plastic washer
7	2		Key
8	1		L type wrench


### Installation

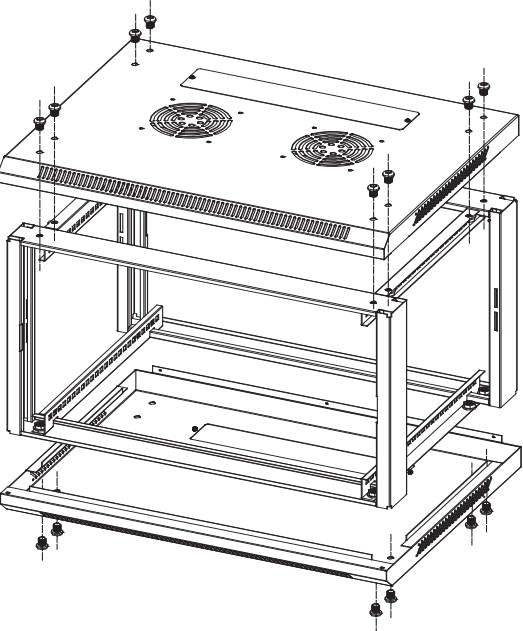


**STEP 1**  
 Assembly the top panel, frames and horizontal beams by 16pcs M8\*12 inner hexagon screws and 16pcs M8 flange nuts.

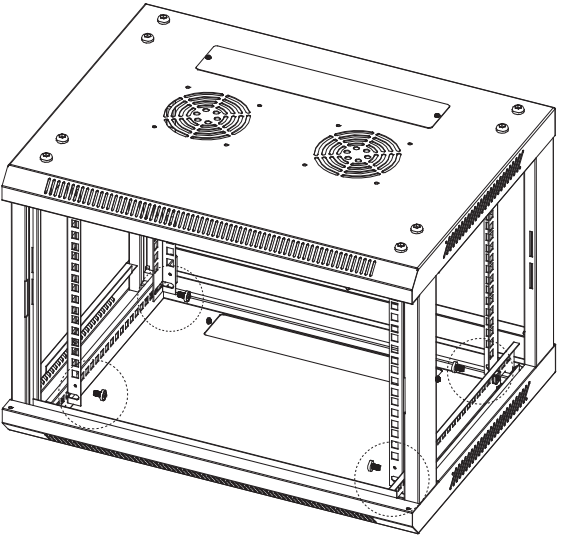

**STEP 2**  
 Assembly the horizontal beams by 8pcs M6\*12 screws and 8pcs M6 Cage nuts.

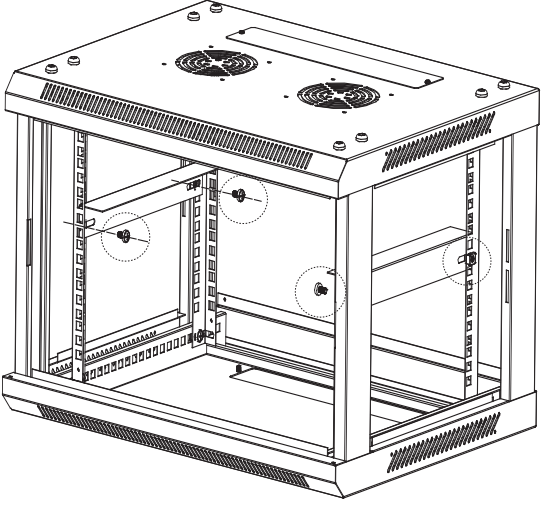

**STEP 3**  
 Assembly the L type mounting brackets by 4pcs M6\*12 screws and 4pcs M6 cage nuts.

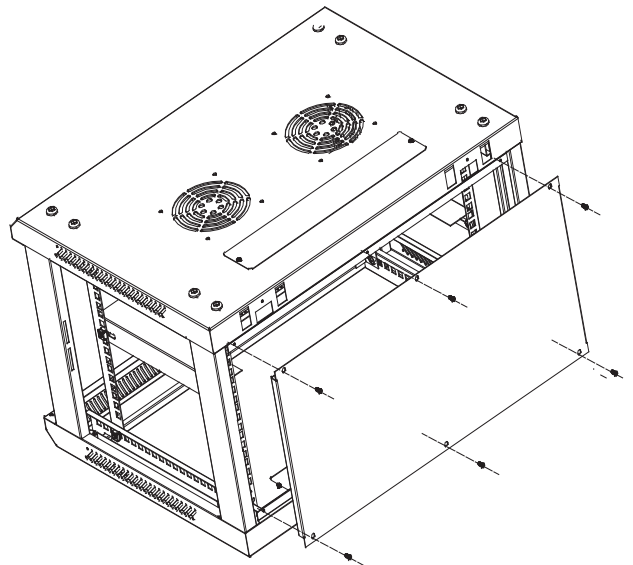

**STEP 4**  
 Assembly the back panel by 6pcs M4\*8 self- tapping screws.