

Wireless Barcode Scanner (TFT)

Setting Manual

Disclaimer

Please read all content of this manual carefully before using product which is described in this manual. This manual is helpful for using product safely. Please keep well for next use.

Do not dismantle terminal equipment or tear up sealed bidding, otherwise our company will do not be responsible for repairing or replacing the terminal.

The pictures in this manual are for reference only. Please refer to the actual product if there is any discrepancy between individual pictures and actual product. For the improvement and update of this product, our company reserves the right to modify the document at any time without notice.

All information contained in this manual is protected by copyright. Our company reserves all rights. Units and individuals are not allowed to extract, copy or combine all or part of this document in any way or for any reason without permission. The products described in this manual may include the copyrighted software of our company or a third party. Units and individuals are not allowed to copy, distribute, modify, excerpt, reverse editing, decode, reverse engineering, lease, transfer, sublicense or other violations of software copyright for the aforementioned software in any form unless permission is obtained from the relevant right holder.

our company has the final right to interpret this statement.

Version

Version	Description	Data
V1.0	Initial Version	2017-06-07
V1.01	Add National Keyboard Layout	2017-08-16
V1.02	Add virtual Bluetooth function (supported by some products)	2018-04-25
V1.03	Add end character setting and case conversion	2019-02-27
V1.04	Add "Custom default setting" function	2019-03-18
V1.05	Add GS character replacement and display GS hidden characters	2019-04-05
V1.06	Add QR code setting function	2019-04-25
V1.07	Add the function of adding prefix and suffix and hidden character	2019-05-21
V1.08	Add virtual serial port settings	2019-10-25
V1.1	Add multiple national language settings, and add Chinese output settings.	2020-03-13
V1.11	Add virtual Bluetooth pairing steps	2020-05-09
V3.0	Added clock control function, escape character set (supported by wireless version 3.0 and above)	2020-08-01

Note: When the 2.4G wireless scanner is selected separately, the related Bluetooth function is not supported.

Content

WIRELESS FACTORY DEFAULT	6
CUSTOM DEFAULT SETTING	7
VERSION	7
SOUND	8
FREQUENCY	9
VIBRATION (OPTIONAL).....	10
BATTERY LEVEL.....	10
SLEEPING TIME	11
DATA FORMAT	13
WIRELESS WORKING MODE	14
REAL TIME MODE	14
STORAGE MODE	15
DATA CONTROL	16
UPLOAD ALL CODE.....	16
UPLOAD TOTAL COUNT	17
CLEAR ALL CODES	17
COMMUNICATION SETTING	18
USB-COM.....	18
WIRELESS 2.4G MODE	18
VIRTUAL BLUETOOTH MODE	19
BLUETOOTH HID MODE.....	20
BLUETOOTH SPP MODE.....	21
BLUETOOTH BLE MODE.....	21
WIRELESS PAIRING	22
2.4 WIRELESS PAIRING STEPS (DONGLE PAIRING)	22
VIRTUAL BLUETOOTH PAIRING STEPS	24
BLUETOOTH HID PAIRING STEPS.....	25
BLUETOOTH SPP PAIRING STEPS.....	27
BLUETOOTH BLE PAIRING STEPS.....	28
BLUETOOTH MODE FUNCTION SETTING	29
PRESS AND HOLD FOR 8S TO ENTER HID MODE.....	29
IOS SYSTEM HID VIRTUAL KEYBOARD SETTING.....	30
BLUETOOTH HID UPLOAD SPEED	32
BLUETOOTH NAME.....	33

GET THE BLUETOOTH NAME..... 35

NATIONAL KEYBOARD LAYOUT 36

CASE CONVERSION 42

GS REPLACEMENT FUNCTION 43

 CUSTOM GS REPLACEMENT 43

 CANCEL GS REPLACEMENT..... 44

CUSTOM PREFIX/SUFFIX..... 45

 ADD CUSTOM PREFIX..... 45

 CLEAR CUSTOM PREFIX 46

 ADD CUSTOM SUFFIX..... 47

 CLEAR CUSTOM SUFFIX 48

 HIDE FIRST/LAST CHARACTERS 49

 CLEAR HIDDEN CHARACTERS..... 51

TERMINATOR 52

CLOCK FUNCTION 54

CONTROL CHARACTER SET ESCAPE SETTINGS 56

APPENDIX-ENTER/EXIT SETTINGS 57

APPENDIX-LED INDICATOR DESCRIPTION 58

APPENDIX-DESCRIPTION OF BUZZER SOUND..... 60

APPENDIX-CONTROL CHARACTER LIST 61

APPENDIX-ASCII CODE CHARACTER TABLE 64

Wireless Factory Default

All scanners have a factory default setting. All the scanner's wireless properties will be set to the default state of the software with scanning the "Wireless Factory Default" setup code.



%%SpecCode93

Wireless Factory Default

Instruction:

You could use it in the following situations:

1. Scanner settings are wrong, such as barcodes that cannot be recognized.
2. You forgot what settings you made to the scanner and you do not want to use the previous settings.
3. Some infrequent functions were set and do not want to keep using it.

Custom Default Setting

You can set the default values of the wireless parameters of the wireless barcode device to the required functions by setting custom default settings. Scan the "Enter Setting Mode" setup code first, then scan the required wireless parameter function, and then scan the "Exit Setting Mode" setup code after the setting is complete. After the setting is completed, the existing functions will replace the original factory default values, and the wireless parameters will not be restored to the original state even if the settings are restored.



%%SpecCode92



%%SpecCode92

Custom Default Setting

Version

Use the scanner to scan the version barcode and you will view the information of current scanner version.



%%SpecCode39



%%SpecCode39

Version

Sound



%%SpecCode97



%%SpecCode97

High*



%%SpecCode96



%%SpecCode96

Medium



%%SpecCode95



%%SpecCode95

Low



%%SpecCode94



%%SpecCode94

Mute

Frequency



%%SpecCode7C



%%SpecCode7C

2048MHz



%%SpecCode7D



%%SpecCode7D

2730MHz

Vibration (Optional)



%%SpecCode77

On



%%SpecCode76

Off

Note: The vibration function is optional for some products.

Battery Level

Scan the "Battery Level" setting code to check out the current battery status.



%%SpecCode15

Battery Level

Sleeping Time



%%SpecCode30



%%SpecCode30

30s



%%SpecCode31



%%SpecCode31

1min



%%SpecCode32



%%SpecCode32

2min



%%SpecCode33



%%SpecCode33

5min*



%%SpecCode34



%%SpecCode34

10min



%%SpecCode35



%%SpecCode35

30min



%%SpecCode36



%%SpecCode36

Never



%%SpecCode38



%%SpecCode38

Sleep Immediately

Data Format

Use the scanner wireless 2.4G or wired USB interface to set the data input format, you can directly output Chinese or other format languages.



%%SpecCodeB5

GBK (Notepad, Excel, etc) *



%%SpecCodeB4

Unicode (WORD, QQ, etc)

Wireless Working Mode

The wireless scanner has two different working modes: instant upload mode and storage mode. The operation mode is switched by different setup codes.

Instant Upload Mode

Instant upload Mode is also called normal mode. In this mode, the barcodes that are scanned will be transmitted to the host device immediately.




%%SpecCode10

Instant Upload Mode*

Storage Mode

Storage Mode is also called inventory mode or warehouse mode. In storage mode, the scanner will not transmit scanned barcodes directly to the host device, but store them in the storage memory. If you need to check or clear the stored barcodes, refer to data control section. When the scanner is powered off, the barcodes stored will not get lost unless the "Clear All Barcodes Stored" setup code is scanned.

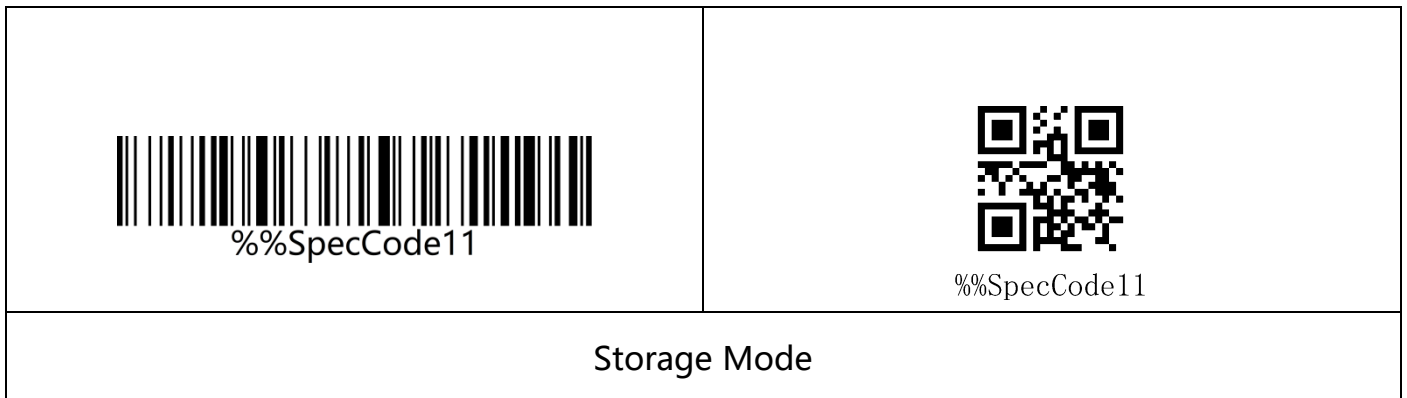

Data Control

Data control is used for processing stored data.

Upload All Code

To upload the data stored in the memory, scan the “Upload All Codes” barcode to transmit data to computers or mobile devices. In whatever mode, the data stored in the memory will not be deleted when data upload succeeds unless the “Clear All Codes” is scanned.



%%SpecCode16

Upload All Codes

Upload Total Count

If you wish to output the total number of barcodes scanned, scan the barcode below.



%%SpecCode17



%%SpecCode17

Upload Total Count

Clear All Codes

Scan the "Clear All Codes" to clear the data stored in the scanner memory.

Note: this operation will clear all stored data.



%%SpecCode18



%%SpecCode18

Clear All Codes

Clear Screen Count



%%SpecCode1F



%%SpecCode1F

Clear Screen Count

Communication Setting

This scanner can not only support wireless communication, but also supports wired communication. When the scanner is wired to the scanner, the scanner will automatically switch to wired transmission.

USB-COM

USB virtual serial port supports the use of 2.4G mode wireless virtual serial port and wired USB virtual serial port, whether you use wired or wireless virtual serial port, you need to install the virtual serial port driver.



%%SpecCodeAE



%%SpecCodeAE

USB-COM

Wireless 2.4G Mode

It is suitable for devices that can be plugged into a 2.4G receiver, and can directly use text output, which is equivalent to USB keyboard input.



%%SpecCodeA8



%%SpecCodeA8

Wireless 2.4G Mode

Virtual Bluetooth Mode

Virtual Bluetooth is suitable for connecting to a host without Bluetooth and does not need to install a Bluetooth driver. When using virtual Bluetooth mode, you need to use a dedicated virtual Bluetooth receiver.



%%SpecCodeA9

Virtual Bluetooth Mode

Bluetooth HID Mode

It is suitable for using in devices that support Bluetooth, such as mobile phones, pads, laptops with Bluetooth, etc. After the connection is successful, you can use direct text input, which is equivalent to the virtual keyboard input method of this type of device.



%%SpecCodeAA

Bluetooth HID Mode

Bluetooth SPP Mode

It is suitable for use in devices that support Bluetooth, such as mobile phones, pads, laptops with Bluetooth, etc. When using SPP to transparently transmit data, you need to download or develop classic Bluetooth SPP transparent transmission software before it can be used. SPP mode is suitable for mass data transmission.



%%SpecCodeAB



%%SpecCodeAB

Bluetooth SPP Mode

Bluetooth BLE Mode

It is suitable for use in devices that support Bluetooth, such as mobile phones, pads, laptops with Bluetooth, etc. When using BLE to transparently transmit data, you need to download or develop low-power Bluetooth BLE transparent transmission software before it can be used. BLE mode is suitable for small amount of data transmission.



%%SpecCodeAC



%%SpecCodeAC

Bluetooth BLE Mode

Wireless Pairing

2.4 Wireless Pairing Steps (Dongle Pairing)

Compatible with XP、Win7、Win8、Win10, MAC OS and so on.

Step 1: Scan the "Wireless 2.4G Mode" setup code

When setting the wireless 2.4G mode, it will give priority to connect to the last paired receiver by default.



%%SpecCodeA8



%%SpecCodeA8

Wireless 2.4G Mode

Step 2: Scan the "Forced Pairing" setup code to enter the pairing state, and the blue LED1 flashes quickly.



%%SpecCode99



%%SpecCode99

Forced Pairing

Step 3: Plug in Dongle (receiver) and hear a beep, indicating that the connection and pairing is successful. Blue LED2 is always on.

Note:

When the scanner is in the pairing state, you can exit the pairing state by double-clicking the button or the pairing timeout for 1 minute.

Virtual Bluetooth Pairing Steps

Compatible with XP、Win7、 Win8、 Win10, MAC OS and so on.

Step 1: Scan the "Virtual Bluetooth Mode" setup code

When setting the virtual bluetooth mode, the virtual bluetooth receiver paired last time will be connected first by default.



%%SpecCodeA9



%%SpecCodeA9

Virtual Bluetooth mode

Step 2: Scan the "Forced Pairing" setup code to enter the pairing state, and the blue LED1 flashes quickly.



%%SpecCode99



%%SpecCode99

Frced Pairing

Step 3: Plug in Dongle (receiver) and hear a beep, indicating that the connection and pairing is successful. The blue LED2 is always on.

Note:

When the scanner is in the pairing state, you can exit the pairing state by double-clicking the button or the pairing timeout for 1 minute.

Bluetooth HID Pairing Steps

Step 1: Scan the "Bluetooth HID Mode" setup code

When setting the wireless bluetooth HID mode, it will give priority to connect to the last paired bluetooth by default.



%%SpecCodeAA



%%SpecCodeAA

Bluetooth HID Mode

Step 2: Scan the "Forced Pairing" setup code to enter the pairing state, and the blue LED1 and blue LED2 flash alternately.



%%SpecCode99



%%SpecCode99

Forced Pairing

Note: Press and hold the button for 8 seconds without releasing it and you will hear a beep, and then release the button to enter the Bluetooth HID pairing state (this function needs to be turned on).

Step 3: Turn on Bluetooth in the device and search for "BarCode Bluetooth HID".

Step 4: Click "BarCode Bluetooth HID" Bluetooth device to enter the pairing state.

Step 5: When you hear a beep, it means the connection and pairing is successful, and the blue LED2 is always on.

Note:

When the scanner is in the pairing state, you can exit the pairing state by double-clicking the button or the pairing timeout for 1 minute.

Bluetooth SPP Pairing Steps

Step 1: Scan the "Bluetooth SPP Mode" setup code

When setting the wireless Bluetooth SPP mode, it will automatically enter the SPP mode and enter the broadcast state by default. You can directly click the BarCode Bluetooth SPP device in the SPP software to pair.



%%SpecCodeAB



%%SpecCodeAB

Bluetooth SPP Mode

Step 2: Search for "BarCode Bluetooth SPP" in the SPP transparent transmission software.

Step 3: Click the "BarCode Bluetooth SPP" Bluetooth device to enter the pairing state.

Step 4: When you hear a beep, it means the connection and pairing is successful, and the blue LED2 is on.

Bluetooth BLE Pairing Steps

Step 1: Scan the "Bluetooth SPP Mode" setup code

When setting the wireless Bluetooth BLE mode, it will automatically enter the BLE mode and enter the broadcast state by default. You can directly click the BarCode Bluetooth BLE device in the BLE software to pair.



%%SpecCodeAC



%%SpecCodeAC

Bluetooth BLE Mode

Step 2: Search for "BarCode Bluetooth BLE" in the SPP transparent transmission software.

Step 3: Click the "BarCode Bluetooth BLE" Bluetooth device to enter the pairing state.

Step 4: When you hear a beep, it means the connection and pairing is successful, and the blue LED2 is on.

Bluetooth Mode Function Setting

Press and hold for 8s to enter HID Mode

When using a Bluetooth barcode, turn on and hold for 8 seconds to enter the Bluetooth HID search.



%%SpecCode79



%%SpecCode79

On



%%SpecCode78



%%SpecCode78

Off

IOS System HID Virtual Keyboard Setting

When using Bluetooth HID mode to connect to IOS system, scan "Show or hide IOS keyboard" to show or hide IOS keyboard



%%SpecCode1A



%%SpecCode1A

Show/Hide IOS Keyboard

Users can also set to quickly show or hide the IOS keyboard. When double-click to display the IOS keyboard function is enabled, the IOS virtual keyboard can be called up by quickly clicking the scanner button.



%%SpecCode7B



%%SpecCode7B

Turn on the double-click to display the IOS keyboard function (HID mode)



%%SpecCode7A



%%SpecCode7A

Turn off the double-click to display the IOS keyboard function (HID mode)

Note: For the Android system keyboard display, please contact the supplier to obtain the Bluetooth input method APP (due to the Android system, some mobile phone manufacturers support the virtual keyboard when connected to the Bluetooth scanner)

Bluetooth HID Upload Speed

When using Bluetooth HID to connect to a Bluetooth host, the upload speed of the Bluetooth scanner can be adjusted according to the response capability of the Bluetooth host. If the uploaded content is messy or missing, please lower the speed.



%%SpecCodeB0



%%SpecCodeB0

Fast



%%SpecCodeB1



%%SpecCodeB1

Medium*



%%SpecCodeB2



%%SpecCodeB2

Slow



%%SpecCodeB3



%%SpecCodeB3


Very slow

Bluetooth Name

Use the following steps to customize the Bluetooth name of Bluetooth HID, SPP and BLE.

Steps

Step 1: Scan the "Custom Bluetooth Name" setup code

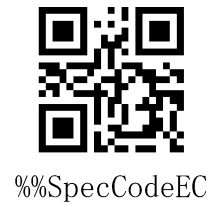

Custom Bluetooth Name

Step 2: Scan the Bluetooth name barcode.

Note: The default name of Bluetooth is "Barcode Scanner". After setting through this step, this barcode will be set to the name of Bluetooth.

a) The name can only be set up to 16 bytes. If the name of barcode exceeds 16 bytes, the scanner will only take the first 16 bytes as the Bluetooth name.

b) The complete Bluetooth name includes: Bluetooth name + protocol type, and only supports to modify the Bluetooth name. After modifying the Bluetooth name, the names of all Bluetooth protocols have been changed.

Example: Set the Bluetooth name to: Scanner.

Step 1: Scan the "Custom Bluetooth Name" setup code



%%SpecCodeEC

Custom Bluetooth Name

Step 2: Make and scan the Bluetooth name barcode



Scanner

Bluetooth Name: Scanner

After setting:

The name of the Bluetooth HID is displayed as: Scanner HID;

The name of the Bluetooth SPP is displayed as: Scnaner SPP;

The name of Bluetooth BLE is displayed as Scanner BLE.

Get the Bluetooth Name



%%SpecCodeED



%%SpecCodeED

Get the Bluetooth Name

Note: Only in the Bluetooth HID, SPP, BLE mode can the Bluetooth name be obtained successfully, otherwise it will fail.

National Keyboard Layout

The keyboard key arrangement, symbols, etc. corresponding to different national languages are not same. The scanner can be virtualized into different national keyboard standards according to actual needs. The keyboard layout setting is applicable to the HID communication interface mode. The default is "American English keyboard".



%%SpecCode40

English



%%SpecCode41

German



%%SpecCode42

French



%%SpecCode43

Spanish



%%SpecCode44



%%SpecCode44

Italian



%%SpecCode45



%%SpecCode45

Japanese



%%SpecCode47



%%SpecCode47

BF - Belgian French



%%SpecCode48



%%SpecCode48

Portuguese



%%SpecCode49



%%SpecCode49

British English



%%SpecCode4A



%%SpecCode4A

German IOS keyboard



%%SpecCode4B



%%SpecCode4B

Brazilian Portuguese



%%SpecCode4C



%%SpecCode4C

Russian



%%SpecCode4D



%%SpecCode4D

Czech



%%SpecCode4E



%%SpecCode4E

Italy 142



%%SpecCode4F



%%SpecCode4F

(Turkey Q)



%%SpecCode50



%%SpecCode50

(Turkey F)



%%SpecCode51



%%SpecCode51

Sweden / Finland



%%SpecCode52



%%SpecCode52

Mexican Spanish



%%SpecCode53



%%SpecCode53

Denmark



%%SpecCode54



%%SpecCode54

Written Norwegian



%%SpecCode55



%%SpecCode55

Croatian/Serbian



%%SpecCode56



%%SpecCode56

Swiss German



Swiss French



Dutch



Hungarian



Polish



Canadian French



Argentina (Latin American)



%%SpecCode5D



%%SpecCode5D

Slovak



%%SpecCode46



%%SpecCode46

International keyboard

Note: The international keyboard supports all minority languages on the PC side.

Case Conversion

By setting the character case conversion function of the scanner, the English letters of the scanner output data can be case-converted.

For example: The content of the barcode is aBC123, scan "Lower", the data obtained by the host will be "abc123". The default is Normal.



%%SpecCodeA5

Normal*



%%SpecCodeA4

Upper



%%SpecCodeA3

Lower



%%SpecCodeA6

Inverse

Note: This parameter is only valid in standard keyboard input mode and keyboard emulation input control character mode.

GS Replacement function

After using the GS replacement function, the GS can be replaced with other characters, which is convenient for the host device to display. When you need to display GS characters, you can set GS to be replaced with 1D of the ASCII code character table.

Custom GS Replacement

Step 1: Scan the "Custom GS Replacement" setup code



Custom GS Replacement

Step 2: Query "Appendix-ASCII code character table" to find the barcode corresponding to the character to be replaced and scan it.


Example:

Replace GS characters with characters that can be displayed" |"

Step 1: Scan the "Custom GS Replacement" setup code.

Step 2: Query the "Appendix-ASCII code character table" to find the barcode corresponding to the "|" character and scan it.

Cancel GS Replacement

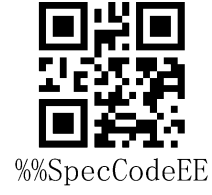

Cancel GS Replacement

Custom Prefix/Suffix

This product supports up to 32-byte prefix and 32-byte suffix setting.

Add Custom Prefix

Step 1: Scan "Add Custom Prefix" Setup Code



%%SpecCode9A

Add Custom Prefix

Step 2: According to the content that needs to be added, query the "ASCII code character table" and scan the setup code corresponding to the custom prefix.

Example:

Original barcode is "ABC123", add custom "789", and output "789ABC123"

Step 1: Scan the "Add custom prefix" setting code;

Step 2: According to the content that needs to be added, query the "ASCII code character table" and scan the setup codes corresponding to "7", "8", and "9".

Clear Custom Prefix

Refer to Adding Custom Prefix Setting and follow the steps below to clear the custom prefix.

Step 1: Scan the "Add custom prefix" setup code;

Step 2: Scan the setup code of "Exit Setting Mode" in "Appendix-Enter/Exit Setting";

Or you can directly scan and restore factory values to clear custom prefixes.

Add Custom Suffix

Step 1: Scan "Add Custom Suffix" Setup Code



%%SpecCode9B

Add Custom Suffix

Step 2: According to the content that needs to be added, query the "ASCII code character table" and scan the setup code corresponding to the custom suffix.

Example:

Original barcode is "ABC123", add custom "XYZ", and output "ABC123XYZ"

Step 1: Scan the "Add custom suffix" setup code;

Step 2: According to the content that needs to be added, query the "ASCII code character table" and scan the setup codes corresponding to "X", "Y", and "Z";

Clear Custom Suffix

Refer to the setting of adding custom suffix and follow the steps below to clear the custom suffix.

Step 1: Scan the "Add custom suffix" setup code.

Step 2: Scan the setup code of "Exit Setting Mode" in "Appendix-Enter/Exit Setting".

Or you can directly scan and restore factory default to clear custom suffixes.

Hide First/Last Characters

Follow the steps below to set the number of digits for the characters before and after hiding, up to 16 digits.

Step 1: Scan the setup code of "Hide first characters" or "Hide last characters"



%%SpecCodeA0



%%SpecCodeA0

Hide first characters



%%SpecCodeA1



%%SpecCodeA1

Hide last characters

Step 2: Scan the barcode corresponding to 01-16 in "Appendix-ASCII code character table" according to the number of prefix or suffix characters that need to be hidden.



Hide 1 character



Hide 2 characters



Hide 3 characters



Hide 4 characters

Clear Hidden characters

Step 1: Scan the setup code of "Hide first characters" or "Hide last characters";

Step 2: Scan the setup code of "Exit Setting Mode" in "Appendix-Enter/Exit Setting";

Or you can directly scan and restore factory default to clear custom prefixes.

Terminator

The terminator is used to mark the end of a complete data message. The terminator must be the last content when a piece of data is sent, and there will be no additional data after that. Choose to scan the appropriate end character to set the barcode according to your needs, the default is Enter.



%%SpecCode9C



%%SpecCode9C

<CR>(0x0D)*



%%SpecCode9D



%%SpecCode9D

<LF>(0x0A)



%%SpecCode9E



%%SpecCode9E

<CR> <LF>(0x0D,0x0A)



%%SpecCodeA2



%%SpecCodeA2

<HT>(0x09)



%%SpecCode9F



%%SpecCode9F

NONE











Clock Function

The clock function is supported by wireless version 3.0 and above. You can set the current time and send it to the output device together with the barcode by setting the clock function.

 %%SpecCode1B	 %%SpecCode1B
Show current time	
 %%SpecCodeC1	 %%SpecCodeC1
Add time before barcode	
 %%SpecCodeC2	 %%SpecCodeC2
Add time after barcode	
 %%SpecCodeC0	 %%SpecCodeC0
Close time before or after barcode	

Note: The clock function needs to be customized and needs to be supported by a software version above 3.0. The clock function will re-time after the barcoder is shut down. You need to use a tool to synchronize the current time of the computer.

Control character set escape settings

 <p>%%SpecCodeBA0000</p>	 <p>%%SpecCodeBA0000</p>
Escape character set 0*	
 <p>%%SpecCodeBA0001</p>	 <p>%%SpecCodeBA0001</p>
Escape character set 1	
 <p>%%SpecCodeBA0002</p>	 <p>%%SpecCodeBA0002</p>
Escape character set 2	
 <p>%%SpecCodeBA0003</p>	 <p>%%SpecCodeBA0003</p>
Escape character set 3	
 <p>%%SpecCodeBA0004</p>	 <p>%%SpecCodeBA0004</p>
Escape character set 4	

Note: The character escape function is supported by wireless version 3.0 and above

Appendix-Enter/Exit Settings



%%EnterSet

Enter setting mode



%%ExitSet

Exit setting mode

Appendix-LED indicator description

Basic function description of indicator light:

Blue LED2	Used to indicate whether the wireless is connected or not, if it is connected, it is always on, if the connection is disconnected, it will be off.
Blue LED1	The scan code indicator light flashes briefly when the barcode is successfully scan.
Red LED3	The red light is always on to indicate that it is charging, and the red light is off to indicate that it is fully charged or not connected to charge
Blue light 2 is off, blue light 1 flashes quickly	2.4G/Virtual Bluetooth mode pairing status
Blue light 1 is off, blue light 2 flashes quickly	Pairing status in SPP mode
Blue light 1 and blue light 2 flash alternately and quickly	Pairing status in HID mode
Blue light 1 and blue light 2 flash synchronously and quickly	Pairing status in BLE mode

Blue light 1 and blue light 2 flash synchronously and slowly	The module is in an upgrade state
--	-----------------------------------

Note: This part of the lighting description is slightly different according to different product configurations. If you need more information, please contact the supplier.

Appendix-description of buzzer sound

One long tone (low first and then high)	Indicates that the power is on
One long tone (high first and then low)	Indicates that the power is off
One short tone (low frequency)	Indicates that the normal barcode is scanned, or the pairing is successful, or the wireless connection is successful.
One short tone (low first and then high)	Indicates that the scanned data is stored in the storage area
One short tone (high first and then low)	Indicates that the setup code was scanned
Three short tones (low frequency)	Indicates that the wireless transmission failed or the buffer is full
Five short tones (low frequency)	Indicates that it need to be charged
Two short tones (low frequency)	Indicates wireless disconnection
Two short tones (high frequency)	Indicates that the scanned setup code does not work

Appendix-Control Character List

Note: The setting code of the control character table refers to the corresponding setting code of 01-31 in the ASCII character table.

HEX	Decimal	ASCII	character set 0	character set 1	character set 2	character set 3	character set 4
01	01	SOH	NULL	Home	Ctrl+A	Alt+001	Enter on the keypad
02	02	STX	Ctrl+B	End	Ctrl+B	Alt+002	Cap Lock
03	03	ETX	Ctrl+C	Up Arrow	Ctrl+C	Alt+003	Right Arrow
04	04	EOT	NULL	Down Arrow	Ctrl+D	Alt+004	Up Arrow
05	05	ENQ	NULL	Left Arrow	Ctrl+E	Alt+005	NULL
06	06	ACK	NULL	Right Arrow	Ctrl+F	Alt+006	NULL
07	07	BEL	NULL	Shift+Tab	Ctrl+G	Alt+007	Enter
08	08	BS	Back Space	Back Space	Back Space	Alt+008	Left Arrow
09	09	HT	Tab	Tab	Tab	Alt+009	Tab



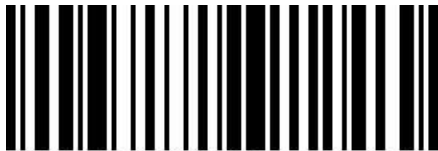

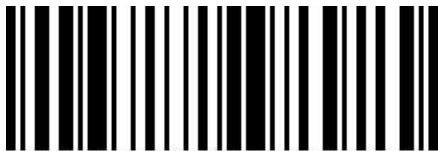

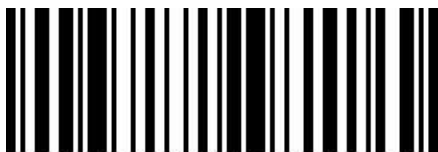



0A	10	LF	Enter	Enter	Ctrl+P	Alt+010	Down Arrow
0B	11	VT	NULL	NULL	Ctrl+Q	Alt+011	Tab
0C	12	FF	NULL	NULL	Ctrl+R	Alt+012	delete
0D	13	CR	Enter	Enter	Enter	Alt+013	Enter
0E	14	S0	F1	Page Up	Ctrl+N	Alt+014	Insert
0F	15	S1	F2	Page Down	Ctrl+O	Alt+015	Esc
10	16	DLE	F3	F11	Ctrl+P	Alt+016	F11
11	17	DC1	F4	NULL	Ctrl+Q	Alt+017	Home
12	18	DC2	F5	NULL	Ctrl+R	Alt+018	Print Screen
13	19	DC3	F6	NULL	Ctrl+S	Alt+019	Back Space
14	20	DC4	F7	NULL	Ctrl+T	Alt+020	Shift tab
15	21	NAK	F8	F12	Ctrl+U	Alt+021	F12
16	22	SYN	F9	F1	Ctrl+V	Alt+022	F1
17	23	TB	F10	F2	Ctrl+W	Alt+023	F2
18	24	CAN	F11	F3	Ctrl+X	Alt+024	F3
19	25	EM	F12	F4	Ctrl+Y	Alt+025	F4
1A	26	SUB	NULL	F5	Ctrl+Z	Alt+026	F5







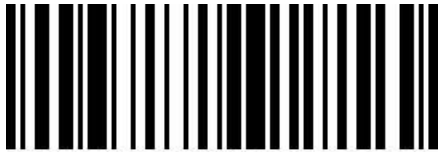









1B	27	Esc	Esc	F6	Ctrl+[Alt+027	F6
1C	28	FS	ALT+028	F7	Ctrl+\	Alt+028	F7
1D	29	GS	ALT+029	F8	Ctrl+]	Alt+029	F8
1E	30	RS	NULL	F9	Ctrl+^	Alt+030	F9
1F	31	US	NULL	F10	Ctrl+_	Alt+031	F10














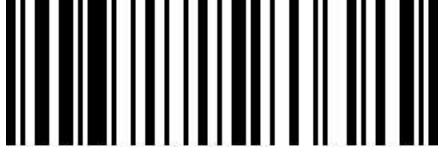


Appendix-ASCII code character table

















Note: 01-31 are invisible characters. Please refer to "Appendix-Control Character List" to set the escape character set.














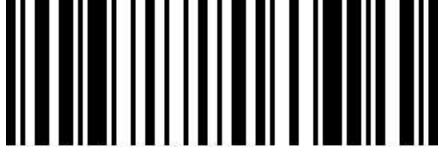


32-127 are visible characters. This part of the characters can generally be directly output through the HID keyboard without escaping.

















Hexadecimal	ASCII	character	1D setup code	2D setup code
01	01	SOH	 %%01	 %%01
02	02	STX	 %%02	 %%02
03	03	ETX	 %%03	 %%03
04	04	EOT	 %%04	 %%04
05	05	ENQ	 %%05	 %%05

















06	06	ACK	 %%06	 %%06
07	07	BEL	 %%07	 %%07
08	08	BS	 %%08	 %%08
09	09	HT	 %%09	 %%09
0A	10	LF	 %%0A	 %%0A
0B	11	VT	 %%0B	 %%0B
0C	12	FF	 %%0C	 %%0C
0D	13	CR	 %%0D	 %%0D





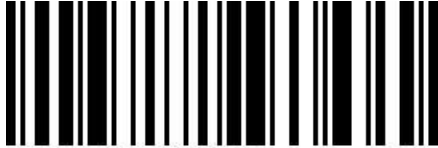








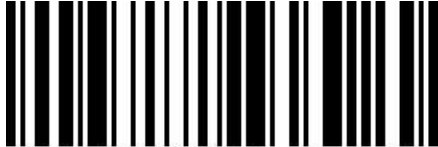


0E	14	S0	 %%0E	 %%0E
0F	15	S1	 %%0F	 %%0F
10	16	DLE	 %%10	 %%10
11	17	DC1	 %%11	 %%11
12	18	DC2	 %%12	 %%12
13	19	DC3	 %%13	 %%13
14	20	DC4	 %%14	 %%14
15	21	NAK	 %%15	 %%15

















16	22	SYN	 %%16	 %%16
17	23	TB	 %%17	 %%17
18	24	CAN	 %%18	 %%18
19	25	EM	 %%19	 %%19
1A	26	SUB	 %%1A	 %%1A
1B	27	Esc	 %%1B	 %%1B
1C	28	FS	 %%1C	 %%1C
1D	29	GS	 %%1D	 %%1D





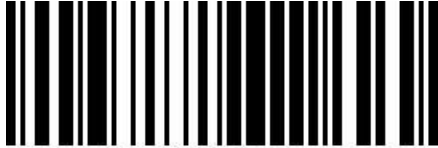








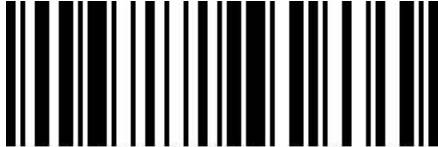


1E	30	RS	 %%1E	 %%1E
1F	31	US	 %%1F	 %%1F
20	32	SP	 %%20	 %%20
21	33	!	 %%21	 %%21
22	34	"	 %%22	 %%22
23	35	#	 %%23	 %%23
24	36	\$	 %%24	 %%24
25	37	%	 %%25	 %%25

















26	38	&	 %%26	 %%26
27	39	`	 %%27	 %%27
28	40	( %%28	 %%28
29	41)	 %%29	 %%29
2A	42	*	 %%2A	 %%2A
2B	43	+	 %%2B	 %%2B
2C	44	,	 %%2C	 %%2C
2D	45	-	 %%2D	 %%2D





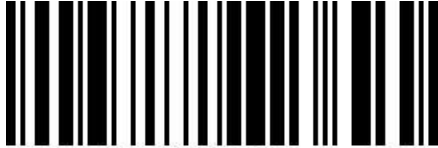








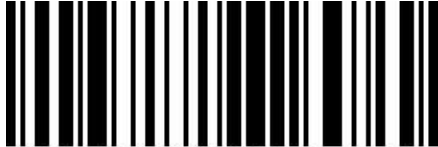


2E	46	.	 %%2E	 %%2E
2F	47	/	 %%2F	 %%2F
30	48	0	 %%30	 %%30
31	49	1	 %%31	 %%31
32	50	2	 %%32	 %%32
33	51	3	 %%33	 %%33
34	52	4	 %%34	 %%34
35	53	5	 %%35	 %%35

















36	54	6	 %%36	 %%36
37	55	7	 %%37	 %%37
38	56	8	 %%38	 %%38
39	57	9	 %%39	 %%39
3A	58	:	 %%3A	 %%3A
3B	59	;	 %%3B	 %%3B
3C	60	<	 %%3C	 %%3C
3D	61	=	 %%3D	 %%3D

















3E	62	>	 %%3E	 %%3E
3F	63	?	 %%3F	 %%3F
40	64	@	 %%40	 %%40
41	65	A	 %%41	 %%41
42	66	B	 %%42	 %%42
43	67	C	 %%43	 %%43
44	68	D	 %%44	 %%44
45	69	E	 %%45	 %%45

















46	70	F	 %%46	 %%46
47	71	G	 %%47	 %%47
48	72	H	 %%48	 %%48
49	73	I	 %%49	 %%49
4A	74	J	 %%4A	 %%4A
4B	75	K	 %%4B	 %%4B
4C	76	L	 %%4C	 %%4C
4D	77	M	 %%4D	 %%4D














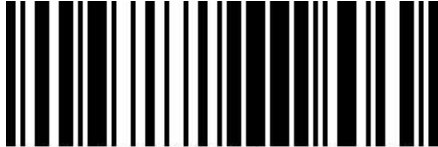


4E	78	N	 %%4E	 %%4E
4F	79	O	 %%4F	 %%4F
50	80	P	 %%50	 %%50
51	81	Q	 %%51	 %%51
52	82	R	 %%52	 %%52
53	83	S	 %%53	 %%53
54	84	T	 %%54	 %%54
55	85	U	 %%55	 %%55









56	86	V	 %%56	 %%56
57	87	W	 %%57	 %%57
58	88	X	 %%58	 %%58
59	89	Y	 %%59	 %%59
5A	90	Z	 %%5A	 %%5A
5B	91	[ %%5B	 %%5B
5C	92	\	 %%5C	 %%5C
5D	93]	 %%5D	 %%5D

5E	94	^	 %%5E	 %%5E
5F	95	_	 %%5F	 %%5F
60	96	'	 %%60	 %%60
61	97	a	 %%61	 %%61
62	98	b	 %%62	 %%62
63	99	c	 %%63	 %%63
64	100	d	 %%64	 %%64
65	101	e	 %%65	 %%65

66	102	f	 %%66	 %%66
67	103	g	 %%67	 %%67
68	104	h	 %%68	 %%68
69	105	i	 %%69	 %%69
6A	106	j	 %%6A	 %%6A
6B	107	k	 %%6B	 %%6B
6C	108	l	 %%6C	 %%6C
6D	109	m	 %%6D	 %%6D

6E	110	n	 %%6E	 %%6E
6F	111	o	 %%6F	 %%6F
70	112	p	 %%70	 %%70
71	113	q	 %%71	 %%71
72	114	r	 %%72	 %%72
73	115	s	 %%73	 %%73
74	116	t	 %%74	 %%74
75	117	u	 %%75	 %%75

76	118	v	 %%76	 %%76
77	119	w	 %%77	 %%77
78	120	x	 %%78	 %%78
79	121	y	 %%79	 %%79
7A	122	z	 %%7A	 %%7A
7B	123	{	 %%7B	 %%7B
7C	124		 %%7C	 %%7C
7D	125	}	 %%7D	 %%7D

7E	126	~	 %%7E	 %%7E
7F	127	DEL	 %%7F	 %%7F
C7	199	Ç	 %%C7	 %%C7
E7	231	ç	 %%E7	 %%E7